



OLYMPUS WIRELESS BLUETOOTH EARPHONE



PACK CONTENTS:

- 1 x EFM® OLYMPUS WIRELESS BLUETOOTH EARPHONE
- 1 x 0.3m USB charge cable
- 1 x User manual
- 3 x Earbud hook & earbuds: small/medium/large

SPECIFICATIONS:

- Frequency: 2.4GHz ~ 2.48GHz
- Sensitivity: 96±3dB
- Impedance: 32Ω±15%
- Driver: 12mm dynamic

FEATURES:

- IPX4 sweat proof
- Handsfree function
- Up to 8 hours of music / talk time
- Active Noise Control

PRECAUTIONS:

1. Please read the instruction manual before using this product.
2. Do not modify, repair or dismantle these earbuds. Doing so may result in fire, electric shocks or a complete breakdown of these earbuds, etc. all of which are not covered under warranty.
3. Do not use any diluent or volatile liquids to clean the earbuds.
4. Do not use the earbuds in a hazardous location.



TECHNICAL SPECIFICATIONS:

| Parameter | Value |
|--------------------------|-----------------------------------|
| Bluetooth® Specification | Bluetooth® 4.2 |
| Bluetooth® Profile | A2DP v1.3/AVRCP v1.5/ HFP v1.5 |
| RF Range | 10 M |
| Frequency | 2.4GHz ~ 2.48GHz |
| Active Noise Cancelling | 150Hz≥-20dB |
| Playback Time | Up to 8 Hours |
| Charging Time | 2 Hours |
| Weight | 22g |

CONNECTION DIAGRAM:



Earbud & Earhook sizes

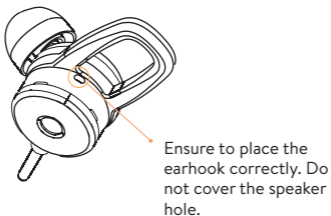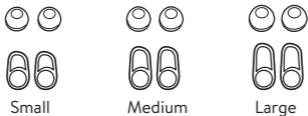

GENERAL FUNCTIONS:

| Desired Result | Required Action |
|----------------------------|--|
| Turn on | Long press MFB button for 3 seconds when the device is off. (Blue LED flashes) |
| Pairing | Press and hold the 'MFB' button until red and blue LED flashing |
| Play / Pause | Short click 'MFB' to play when the device is pausing and short click 'MFB' to pause when the device is playing |
| Next Track/ Volume Up | Long press the '∧' button for Next Track. Short press the '∧' button for Volume Up |
| Prev Track/ Volume Down | Long press the '∨' button for Previous Track. Short press the '∨' button for Volume Down |
| Turn Off | Press the MFB button for 3 second until red LED flash then off. |
| Low Battery Warning | The Red LED flash once every 20 sec |
| Charging | Plug the charger to port of the device |
| Answer Call | Short press the 'MFB' button to answer a call |
| End Call | Short press the 'MFB' button end a call |
| Reject Call | Press the 'MFB' button for 1 -2 seconds to reject call when the call is ringing |
| Voice Commands | Press the 'MFB' button for 1-2 seconds to activate Siri or Google Assistant |
| Active Noise Cancelling | Double press the 'MFB' button on power on mode. |

PAIRING TO MOBILE PHONE OR OTHER DEVICE:

To use your earbuds, you must first pair them with a phone or a computer. Once your earbuds are paired to a specific mobile phone or other device, they will remain paired and automatically connect whenever they are within range.

Pairing to a Phone and/or Media Device:

- Turn on your phone and ensure its Bluetooth® function is activated.
- Turn on the earbuds to the pairing mode.
- Search your Bluetooth® devices on your phone by following the phone's instructions. Select EFM Olympus and follow your phone instructions to select this pairing.
- Blue LED will flash slowly when pairing is successful.
- You can play music; watch TV/movies and play games with your phone while listening to music from the device. You can also control the player by operating the device. For example, increase the volume and selecting the next track from you music.

Pairing to a Computer and/or Media Device:

- If there is no Bluetooth® function supported by your computer, a Bluetooth® adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth® function is activated.
- Turn on the device and go to the pairing mode.
- Open the Bluetooth® interface on your computer and select 'Search your Bluetooth® devices' function.
Refer to the user manual of the respective device for more information.
- After a few seconds the 'EFM Olympus' should appear as a discovered device.
- Select 'EFM Olympus' and the device will commence pairing with the earbuds.
- Open your media player to watch TV/movies and play music and games. The sound will playback on your device.

CHARGING YOUR DEVICE:

The device conveniently connects to an AC charger or a USB charger with a Micro USB port. Make sure that your device is fully charged for at least 3 hours before initial use. Insert one terminal of your charger into the AC main or USB port of the PC and the other terminal to the Micro USB. While charging, the red LED light will display and once charging is complete the indicator LED turns from red to blue.

WARNING:

- Use only the charging cable supplied to charge the earbuds.
- If the earbuds have not been in use for more than 12 months they must be recharged.
- Please don't use the USB charger on any other phone jack device.

FAQ:

1. Why is there no power even when the earbuds have the power on?
A: Ensure the battery has been charged for up to 3 hours before using for the first time. The LED is lit once it starts charging.
2. There is no sound when played.
A: Check the connection between your device and the phone or computer. If the connection is not established, please pair again.
3. How do I know if the earbuds are fully charged?
A: blue LED will illuminate to indicate fully charged earbuds.

REPLACEMENT WARRANTY REGISTRATION INSTRUCTIONS:

1. Register your product along with your proof of purchase (receipt) within 14 days at www.myefm.com/register.
 2. If you have any issues with your registered product during the warranty period, complete the Warranty Claim form, including any images of the fault, at www.myefm.com/warranty.
 3. Once submitted EFM will review your claim and, if approved, will ask you to return your faulty product to EFM Head Office at your cost. Once EFM receives the faulty item, your free replacement product will be sent to you at zero cost within Australia.
- Please Note: Only products registered within 14 days of purchase with a valid receipt are eligible for the EFM Registered Warranty Program.
 - This program covers EFM products only, not devices and/or device parts. The 2 Year free replacement warranty is limited to 1 replacement per verified proof of purchase registration.
 - This warranty is in addition to other rights and remedies of the consumer under Australian Consumer Law for Consumer Electronic Devices and Home Entertainment Products.

LIMITED PRODUCT WARRANTY DETAILS:

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage for up to 12 months from the date of purchase. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure (defective goods) within 12 months from the date of purchase.

To claim under the warranty you need to return the product to the place of purchase (at your expense) with a valid receipt or other proof of purchase. If you are not able to return the product to the place of purchase you can contact:

EFM Service Department
61 Belmont Avenue, Belmont WA 6104
P: 1300 069 336 (1300 0 MYEFM)
E: info@myefm.com

EFM REGISTERED WARRANTY PROGRAM

In addition to a standard 12 month limited warranty, all registered EFM products are also covered by one full replacement warranty of 2 or 5 years, dependent on the product. This registered warranty is against defects in the goods purchased and does not cover damage caused by the incorrect use or installation of the goods, or by modifications, or by accident. To be eligible for the EFM Registered Warranty Program, follow the instructions overleaf.



myefm.com