MEFM

EFM® AUSTIN MINI SPEAKER USER MANUAL

Introduction

The $\mathsf{EFM}^{\otimes}\operatorname{\mathsf{Austin}}\operatorname{\mathsf{Mini}}\operatorname{\mathsf{Bluetooth}}$ Speaker works with tablets, notebooks and smartphones that are Bluetooth compatible. Enjoy up to 10 hours of music and hands-free calling. To get the best results when using this device, please read this manual first.

Pack Contents

1 x EFM® Austin Mini Bluetooth Speaker (16W) 1 x 0.5m Type-C Charging Cable 1 x 0.5m 3.5mm Aux Cable 1 x User Manual & Warranty Details

Important Safety Precautions

When using a portable Bluetooth speaker, basic safety precautions should always be followed, including the following:

Pairing Bluetooth Devices to Your Speaker 1. Keep this product and its charging cable away from excessive In order to pair your Bluetooth compatible device with the EFM* Austin Mini Speaker for the first time, follow the steps below: 2. Do not operate this device with a damaged cable, after it

 bo not operate this device with a damaged cable, are in the has malfunctioned or has heen demaged in any manner.
 Do not disassemble your device. 1. Make sure the Bluetooth compatible device you wish to pair is located close to the speaker.

Power On / Power Off

2. Press and Hold the Power ① Button for 2 seconds to turn the

Charging Your Speaker

speaker on, the LED status light will flash on the front of the speaker to confirm it has been activated. Plug the Type-C connector of the included charging cable to the Type-C charging port on your speaker. Then plug the 3. Activate the Bluetooth function on your compatible device. (Please refer to the manufacturer's instructions for



Bluetooth Phone Calls

Power On: Press and Hold the Power ① Button for 2 seconds to turn the speaker on, the LED status light will flash on the front of the speaker to confirm it has been activated. 1. Press the ${\boldsymbol{\ast}}$ button to answer an incoming call, Press the ${\boldsymbol{\ast}}$ button again to end the call.

Aux-in Mode **Power Off:** Press and Hold the Power ① Button for 2 seconds to turn the speaker off, the LED status light on the front of the speaker will go out to confirm it has been deactivated.

1. If you have a device with a 3.5mm Aux-in port you can connect the EFM® Austin Mini Speaker together with it using the included 3.5mm Aux cable. Plug one end of the 3.5mm Aux connector cable into the speakers Aux-in port and the other connector end into your compatible device. The speaker will sound to confirm the connection is successful, ready for media playback.

3. Press the (1) button to play music and then press again to mute.

 \bigcirc

+-

_

⊼ •

Volume Up / Next Track Volume Down / Previous Track

TWS Connection

-- TWS / LED Status -- Answer / End Phone Call

NOTE: When the speaker is in Aux-in mode, pressing + / - only trols the volume.

Battery Status

When the speakers battery is running low you will be prompted by



Master (Left Channel)

TWS Mode (True Wireless Stereo)

With the latest TWS technology any two speakers from the EFM® Austin range (EFM® Austin Mini | EFM® Austin | EFM® Austin Pro) Austin range (EFM® Austin Mini | EFM® Austin | EFM® Austin Pro) can be connected together via their TWS pairing feature, for the ultimate audio experience. It is important to understand how this process works. The speaker your device initially connects to is called the "Master Speaker", as shown in the image above. The "Master" can then connect to any secondary EFM® Austin speaker, called a "Slave", which receives the audio from your device through the "Master Speaker".

1. Ensure the EFM^{\otimes} Austin Mini is powered on and not paired with any devices. If already paired, disconnect from device. 2. Power on the second speaker, ensuring it is not paired with any devices. If already paired, disconnect from device. 3. Hold the 🛤 button on the MASTER speaker, the LED light will

Slave (Right Channel)

 $\overline{}$

⋈

*

Music Playback in TWS Mode

 While in TWS Mode Press the ① button on the MASTER or Slave speaker to play / pause the track, both speakers will automatically synchronize any actions with each other.
 Press the + / - button on MASTER or Slave speaker to control volume.

3. Press and hold the + / - button on MASTER or Slave speaker to select next or previous track.

Note: When paired with a second Austin speaker (Slave speaker) the volume and control buttons will work the same as on the MASTER speaker, synchronizing. Additionally your paired device will control both speakers at the same time.

Reset Pairing

To disconnect or un-pair from a Bluetooth device, hold the button until you hear notification. You may have to "Forget Device" from your Bluetooth settings to re-pair your device again.

Waterproof

EFM® Austin Mini is rated IPX7, this product is protected against the effects of immersion in up to 1 metre of water for 30 minutes.

IMPORTANT:

To ensure that the EFM® Austin Mini is waterproof, please remove all cable connections and tightly close the Auxiliary Ports cover, exposing the EFM® Austin Mini to liquids without doing so may result in permanent damage to the speaker. Do not expose the EFM® Austin Mini Speaker to water while charging, as doing so may result in permanent damage to the speaker or power source.

Specifications

MEFM myefm.com

THE EFM[®] 2 YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

EFM[®] warrants that its products are free from defects in materials or workmanship for up to 2 years from the date of purchase EFM[®] will repair or replace any product which is defective in materials or workmanship at no charge to the customer (for parts or labour). The customer is responsible for any transportation costs.

This warranty does not cover or apply to any damage or defects caused by the incorrect installation of the IPX7 product, through your modification of the IPX7 product, cosmetic damage, damage caused by accident, or damage caused by abuse or improper use of your IPX7 product, including using the IPX7 product in environments where the relevant IP rating limitations are exceeded. This warranty does not apply to any consequential loss or damages which may be incurred through your use of the IPX7 product, including but not limited to damage of any nature caused to any products used in conjunction with the IPX7 product.

Please do not expose your IPX7 product to chlorinated water. Over time, chlorinated water can corrode the rubber seals on the IPX7 product. Accordingly, prolonged use in chlorinated water is not recommended

To claim under the warranty, you need to return the faulty $\mathsf{EFM}^{\circledast}$

 NOTE: The internal battery of your speaker takes approximately three hours to charge when completely drained. A "search Bluetooth devices and select "EFM Austin Min". If required, enter the password '0000' to confirm pairing. A "search Bluetooth devices and select "EFM Austin Min". If required, enter the password '0000' to confirm pairing. A "search Bluetooth devices and select "EFM Austin Min". If required, enter the password '0000' to confirm pairing. A the connected to power, an orange LED light will go out when your speaker is fully charged but devices and select "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". The second speaker and your device will show the "EFM Austin Min". T	KHZ EFM Customer Service Department DM PO BOX 684, Belmont WA 6104 P: 1300 069 336 (1300 0 MYEFM) F: 1950/00000000000000000000000000000000000
---	---