

10,000 mAh Power Bank with 15W Wireless Charging

 
PACK CONTENTS



EFM POWER BANK WITH WIRELESS CHARGING



EFM TYPE-C CHARGING CABLE



INSTRUCTIONS AND WARRANTY

SPECIFICATIONS

| INPUT | |
|-----------------|------------------------|
| 1. USB-C | 5V/3A, 9V/2A |
| OUTPUT | |
| 1. USB-C | 5V/3A, 9V/2A, 12V/1.5A |
| 2. USB-A (QC.3) | 5V/3A, 9V/2A, 12V/1.5A |
| 3. USB-A | 5V/2.1A |
| WIRELESS OUTPUT | 15 WATT MAX |



CHARGING YOUR POWER BANK

1. Connect your EFM Power Bank to the micro USB input port.
2. Connect the USB charging cable to a USB power source such as your computer or charger to Fast Charging*.
3. Charge until 4 LED indicators are illuminated.
4. Disconnect the Power Bank from the power source.

CHARGING YOUR DEVICES

1. To charge or Fast Charger* your device, connect it via USB cable to the Power Bank.
2. The Power Bank will automatically recognise it is connected and will begin charging your device.
3. Ensure your device is on when charging to verify the connection is correct and charging commences.
4. When charging your device the white indicator lights on the Power Bank will illuminate. If the lights are not glowing it means the Power Bank has shut off.
5. Charge/discharge your Power Bank every 3 months when not in use for long periods of time to ensure the longevity of the Power Bank battery.

PLEASE NOTE: Fast Charge output to a mobile device requires the use of a USB Type-C to Type-C cable. Fast Charge input also requires a Type-C cable as well a power source with sufficient power.

CHECKING THE POWER LEVEL

1. Press the power button located on the left of your Power Bank.
2. If all four lights are on, it means the power level is between 75%~100%; if three lights are on, the power level is between 50%~70%; if two lights are on, the battery level is between 25%~50%; if only one light is on, the battery level is between 0~25%.
3. When only one light is on or if none of the lights are on, it is time to charge the Power Bank.

| ○○○○ | ●○○○ | ●●○○ | ●●●○ | ●●●● |
|---|---------------------------------|-----------------------------------|-----------------------------------|------------------------------------|
| 4 LEDs off: Immediate charging required | 1 LED on: 0~25% power remaining | 2 LEDs on: 25~50% power remaining | 3 LEDs on: 50~75% power remaining | 4 LEDs on: 75~100% power remaining |

SAFETY TIPS

1. Keep the Power Bank away from excessive heat, direct sunlight, humidity, water or other liquids.
2. To prevent electrical shock, explosion and/or injury;
 - Do not use in temperatures of 60°C+ or in direct sun.
 - Do not open the battery casing under any circumstances.
 - Do not use this unit for anything other than its intended purpose.
 - Do not operate the Power Bank if it has been wet or damaged.
 - Do not operate the Power Bank with wet hands.
 - Do not cover the Power Bank or place on top of other electrical devices.
3. Keep ports free from dust, lint etc. that may interfere with connections.
4. The Power Bank is not a toy - keep out of reach of children.

EFM® 5 YEAR REPLACEMENT WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

EFM® will happily repair or replace defective goods for up to 5 years from the date of purchase. This warranty is against defects in the EFM®

goods purchased and does not cover damage caused by the incorrect use or installation of the goods, or by modifications, or by accident.

To claim under the warranty, you need to return the faulty product to the place of purchase (at your expense) with a valid proof of purchase. If

you are not able to return the product to the place of purchase, you can contact:

EFM Customer Service Department
61 Belmont Avenue, Belmont WA 6104
P: 1300 069 336 (1300 0 MYEFM)
E: info@myefm.com
Important:

The 5 Year Warranty covers EFM® product and not your device. Whilst we stand by our products, EFM® will not be liable to any damages caused to your device from accidental impact. For more information visit myefm.com