




Introduction:

Thank you for choosing the EFM TOLEDO BLUETOOTH SPEAKER! You can use this product with any Bluetooth compatible device to stream music and enjoy hands-free calling. In order to get the best results when using the speaker, please read this manual first.

Specification:

Bluetooth version: V4.2 Maximum Output: 16W Built-in Power: Li-ion 2500mAh SNR: >75dB Wireless Working Frequency: 80HZ-20KHZ
Wireless Transmission Distance: Up to 33 ft (10m) Charging Time: 2-3 hours Playback Time: Up to 15 hours playtime Charging: DC 5 V± 0.5/700mA Size: 73mm (D) x 185mm (H)

Package Contents:

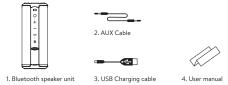

Important Safety Precautions:

To ensure the safe use of your EFM TOLEDO BLUETOOTH SPEAKER, please follow these precautions:

1. Keep the speaker and charging cable away from sources of

2. Do not operate the speaker with a damaged cable or after it has malfunctioned or been damaged in any way. 3. Do not attempt to disassemble the speaker unit.


Charging your speaker:

Connect one end of the supplied USB charging cable to the charging port on your speaker.

Plug the other end of the USB charging cable into a suitable USB port on your computer or compatible charging device.

When charging, a white LED light will illuminate to indicate that the unit is charging. The white light will turn off when your unit is fully charged.

Speaker Functions:

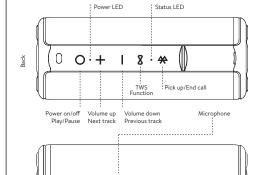

Power on/off function:

To power on the speaker unit, press and hold " $\ensuremath{\bigcirc}$ " for 3 seconds or until the 'Status LED' comes on. To power off the speaker unit, press and hold " $\mbox{\sc O}$ " for 3 seconds or until the 'Status LED' goes out.

Pairing your speaker:

- Ensure that the Bluetooth device you intend to pair is within
 3m of the speaker unit and that the speaker unit is powered on.
- Activate the Bluetooth function on your device. Please refer to the manufacturer's instructions if you are unsure how to activate this function.
- In your device's Bluetooth manager and select 'EFM TOLEDO' from the menu. If required, enter the password '0000' to confirm & finalise pairing.
- 4. Once successfully paired, a tone will sound and the white LED indicator light will glow continuously.

Auxiliary-In Mode:

1. Connect the your device via the included Auxiliary cord. 2. Press "O" to play music and then press it again to mute music.

Call Function:

Press "

" to pick up or end a phone call.

2. During a call, press and hold " ** to switch between your device and the speaker.

TWS Function (Connect two):

1. Turn off the Bluetooth on your phone or device and make sure speakers are not connected with any devices (also remove the Aux-in cable).

2. Single press the "♥ " button on the master speaker unit you will hear "TWS Pairing" followed shortly after with "TWS Paired" confirming the connection

Now turn on Bluetooth on your phone or device and connect to the master unit (you may have to press EFM TOLEDO in your paired devices list to connect if it doesn't

4. You will hear "Device Paired" - The master unit will have a flashing white LED and the second speaker will have a solid blue LED confirming you are ready to go!

5. To clear the connection – hold down the "> "button until you hear "TWS Cleared" – Repeat the process above to re-connect.

Note: If you have already paired and saved both speaker units, it is advised to rename the speakers so they can be easily identified in your saved list. Alternatively remember the position in the list. As you will need to connect to the master speaker and press the master speaker " 🗪" button for the connection to work.

MEFM

myefm.com

REPLACEMENT WARRANTY REGISTRATION

Register your EFM product, including your proof of purchase (receipt) by completing the form at myefm.com/register within 14 days of purchase.

If in the future you have any issues with your product, complete the warranty claim form at myefm.com/warrantyclaim.

Once reviewed, and if approved, your free replacement product will be sent to you, free of charge, anywhere within Australia.

Please allow up to 10 days for replacement delivery.

Product not registered within 14 days of purchase with a relevant proof of purchase document will not be eligible under the EFM replacement warranty program. This program covers EFM products only, not devices and/or device parts.

REPLACEMENT WARRANTY DETAILS

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure (defective goods).

EFM will repair or replace such defective goods for up to 2 years from the date of purchase. This warranty is against defects in the goods purchased and does not cover damage caused by the incorrect use or installation of the goods, or by modifications, or v accident. To claim under the wa product to the place of purchase (at your expense) with a valid receipt or other proof of purchase. If you are not able to return the product to the place of purchase you can contact:

EFM Service Department 61 Belmont Avenue, Belmont WA 6104 P: 1300 069 336 (1300 0 MYEFM)

E: info@myefm.com

This warranty is in addition to other rights and remedies of the consumer under Australian Consumer Law for Consumer Electronic Devices and Home Entertainment Products.